


Auto-Lock Installation

no hinge is visible



(1) Push Lock Barrel through door.
Turning key will help in this step.

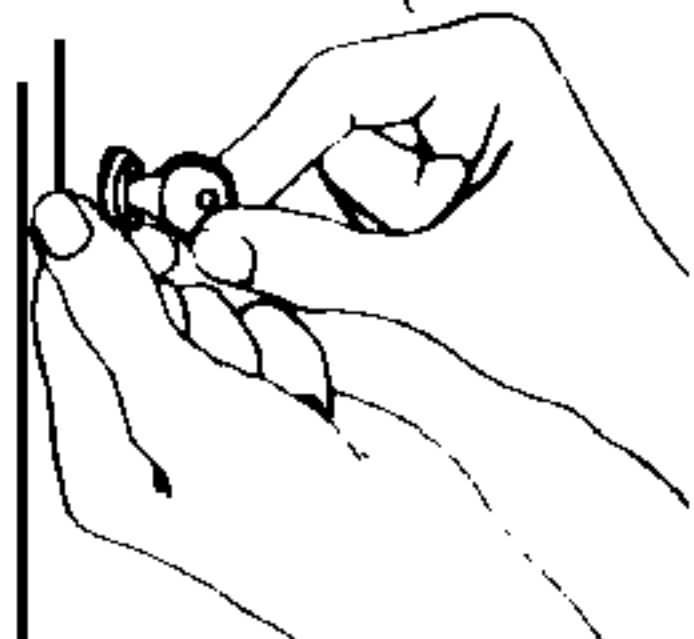

hinge should be visible



(2) Secure lock with clip as illustrated



(3) Mount door onto cart
(see Door Installation Instructions)