

Combo-Lock Instructions


Ultra-Secure Combination Doorlock Option



Our 3-digit combination doorlock, with over 1000 possible combinations offers an ultra-secure, keyless option that eliminates lost keys. Master key (sold separately) can override or retrieve current combination.

Installation Instructions:

- Retrofits standard $\frac{3}{4}$ " cam hole
1. Peel protected paper off of double-sided tape on back of combolock.
 2. Carefully insert lock body through front of $\frac{3}{4}$ " drilled hole while aligning lock to desired position to affix on cabinet door.
 3. Thread cylinder nut and tighten.
 4. Note clear, distinct open and close indicators on front of lock.
Knob will be turned to 'open' to release lock.
 5. Attach cam (straight or offset) onto back of lock body.
 6. Secure with nut and nut washer.

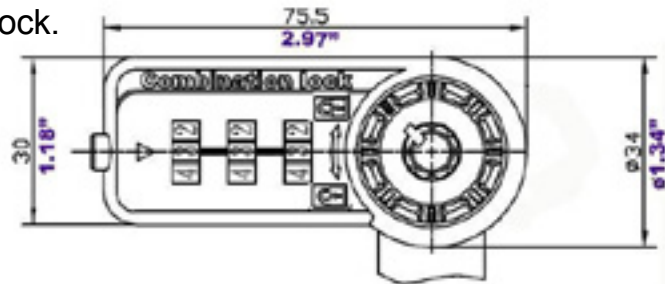

Setting Your Own Combination:

- The combination is factory set at all 0's.
- Combination must be on opening number prior to resetting.
- On top of lock is code reset button. Press and keep pressed down reset button.
- Set your personal combination by turning dials to desired combination.
- Release reset button and your combination is set.
- To lock, rotate one or more dials after lock is closed.
- To open lock, turn dials to your personal combination.

Unlocking Cam Lock Using Key:

- Insert key into lock, rotate key anti-clockwise to unlock symbol.

Discovering Combination Using Key:

- Open with master key to unlocked position.
- While in the unlocked position, turn each dial until it stops.
- Once all of the dials have stopped, current combination has been discovered and can be reset.

Caution:

- Once combination has been selected, avoid pressing "set" button. In some instances, it could cause combination to accidentally change (Should this happen, use Master Key at any time to discover the combination (see above)).