


#S-SYSTEM Installation

Step 3


Locate fasteners on lower panel. Loosen nylon hex nuts and slide bin into position. Simply tighten the assembly as desired. (SEE ILLUSTRATION B)

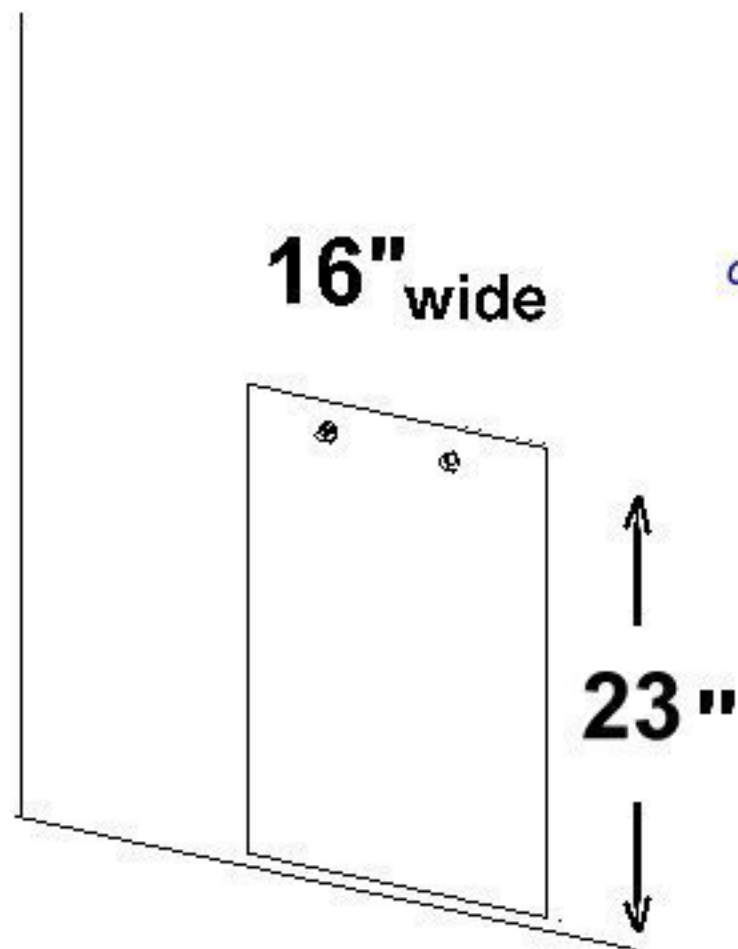


* For flush setup it is neccessary to chisel wall where pancake bolts make contact.

Step 1

Locate the lower panel which has 2 holes near the top of the panel. Attach fasteners as pictured in illustration B. Mount panel flush to wall using anchors fasteners or adhesive.

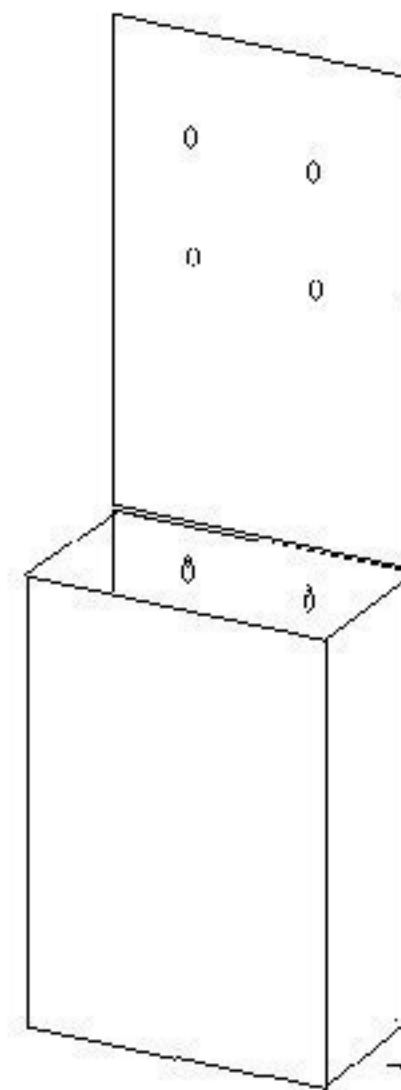


Fastener Assemblies

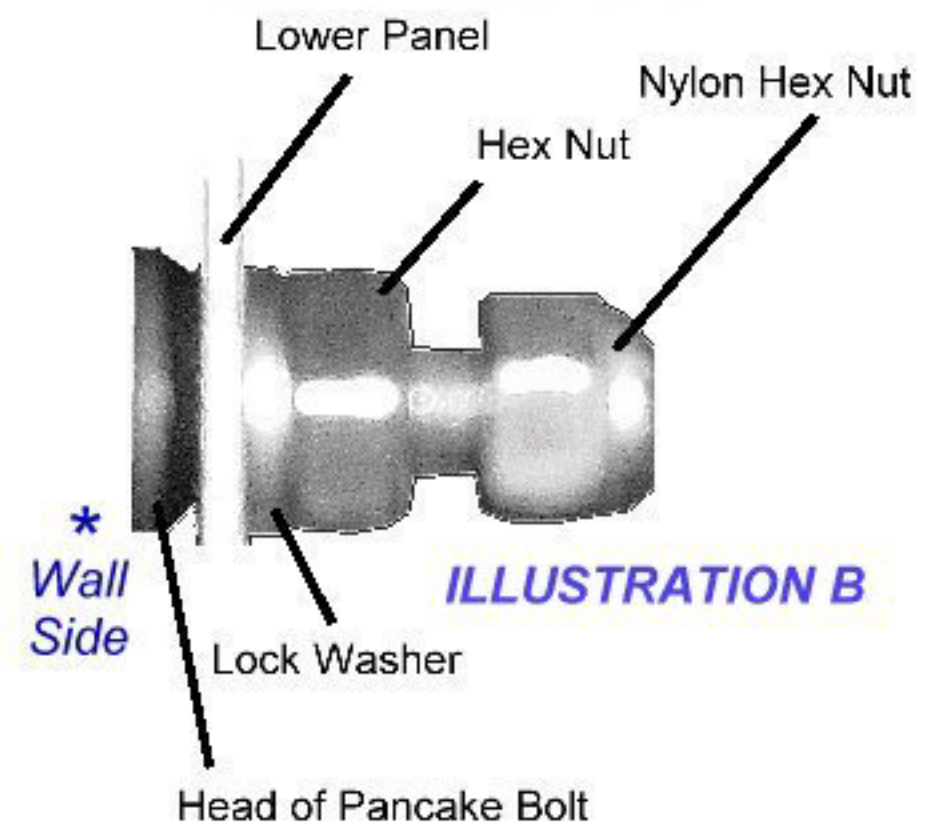

Step 4

Locate towel dispenser. Align and fasten through the top panel using anchors or screws.

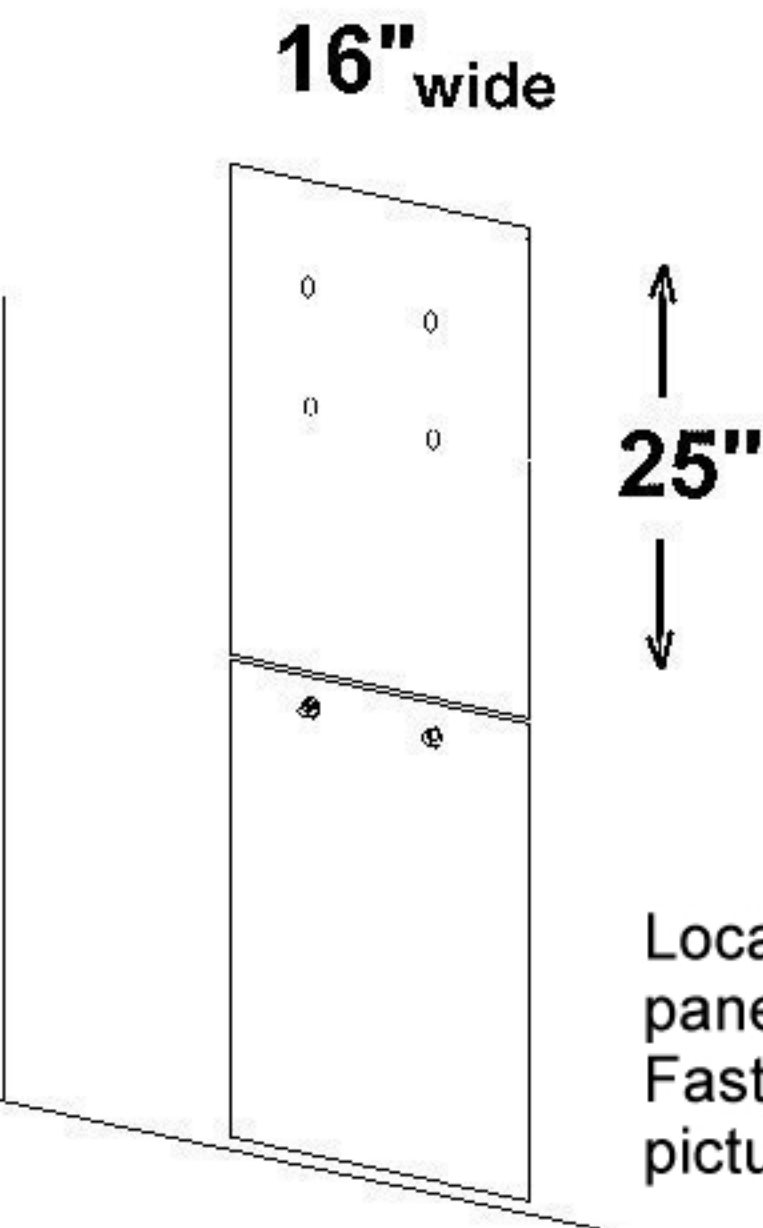

Step 2

Locate the upper panel. This panel has a 4 hole template. Fasten securely to the wall as pictured, using adhesive.

