

Stainless Steel Paper

13"

Towel Systems 1" keyhole mounts 8" centers 5 3/4"

16" x 56" Fixture Panel Dimensions 16" panel 1"from top 13" dispenser

L SYSTEM Installation Instructions

0


0

0

1" slot 4 1/2" down 4 1/8" centers 4 1/2"

9 3/4"

8

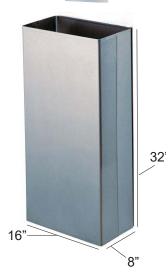




8" space between fixtures

32" Bin

2"from bottom

Folded Towel Dispenser

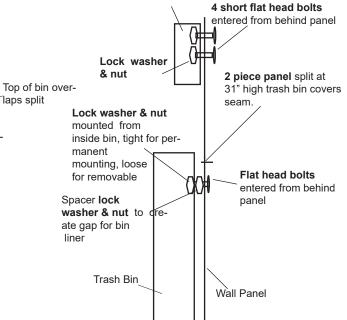

Mounting Instructions

- 1. 4 flat head bolts entered from behind panels before hanging on wall.
- 2. Screw lock washer & nuts to bolts for bin firmly to bottom panel before hanging panel on wall.
- 3. Mount paper towel dispenser to top panel with 2 flat head bolts and lock washers & nuts tightly before hanging panel.
- 4. Hang panels to wall with adhesive or with additional holes in panel (drill bits are available from Royce Rolls at no charge).

Do not use fixture holes to mount panel to wall.

5. Bin is designed to be removable for cleaning. Screw 2 additional lock washers & nuts loosely to bin panel bolts. Hang bin on keyhole mounts. Tighten bolts firmly for permanent mounting.



56" high _I

25'

31"

2 3/8'

11 1/8"

All holes 1/4"

Panel split at 31" high

