


#VAC PLATE Installation



- 1** Flip cart so wheels are upright.

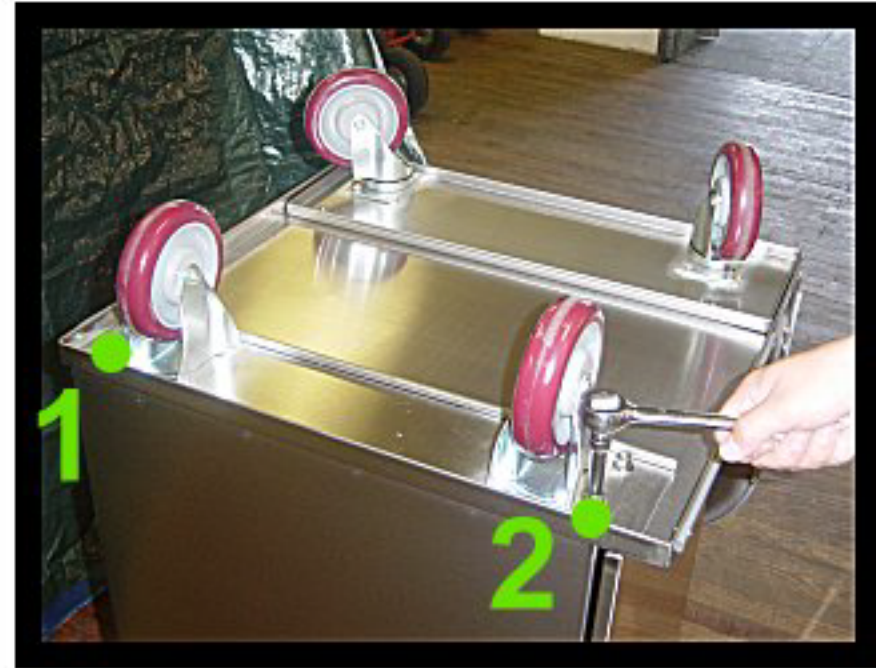

- 2** Remove **2** rear bolt assemblies.



- 3** Insert plate into seam.



- 4** Reattach bolt assemblies.



- 5** Flip cart upright.
Set vacuum on plate.



- 6** Attach Vac Clip to handle.