
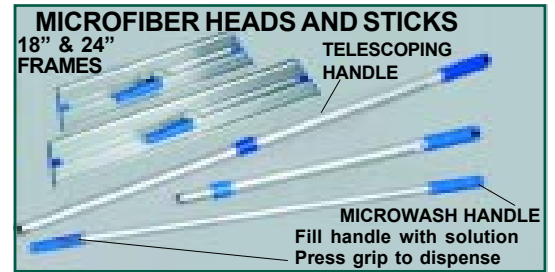


Royce Rolls Ringer Co.

Microfiber Method and Cleaning Instructions

A new way to clean your floors!

Microfiber allows for better infection control than standard wet mopping. No dirty rinse water. Pads are used 1 per room, then laundered for re-use. Meets current JCAHO standards for hospital patient rooms.

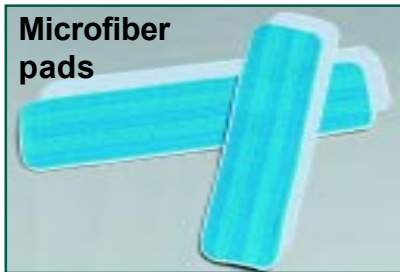

The MPRESS method



Press bin fits in top of cart tray, leaving room for cart top storage. 8" x 20" x 8" container. Soak quantities of microfiber pads in MPRESS bin.

Gently Press excess solution back into storage container. (Use one hand to squeeze the press, the other to support the bin). Pad can then be dropped to the floor and fixed to Velcro® head.

Thoroughly clean floor with pad and swivel handle. Figure 8 pattern recommended.

When finished, remove pad by stepping on edge of pad. Fix pad at 90°. No bending necessary.

Large 14" x 24" #POUCH24 antibacterial clip on pouch holds a large amount of soiled pads.

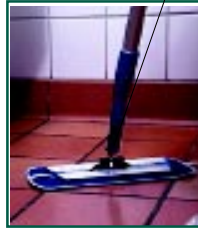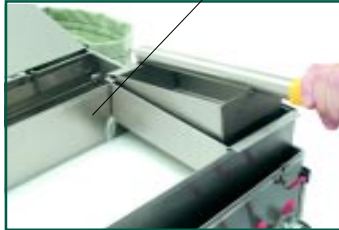

Cleaning Instructions for Microfiber Pads and Cloths

- ◆ Machine wash at no higher than 200 degrees Fahrenheit
- ◆ Air dry or tumble dry on low heat or no heat
- ◆ Use an environmentally friendly detergent
- ◆ Use no chlorine or bleaching agent
- ◆ Do not use fabric softener
- ◆ Do not wash or dry with a terry cloth towel, regular mop, or anything that sheds lint



ROYCE ROLLS RINGER COMPANY

Grand Rapids, Michigan Since 1925

TOLL FREE 1-800-253-9638 FAX 616-361-5976 www.RoyceRolls.net

